



COMMERCIAL

VCC-08

User Guide




Vax Commercial Careline: (UK) 0844 375 4275
vaxcommercial.co.uk

Performance is everything.™

VCC-08

Machine Overview

- 1 Extension tubes
- 2 Crevice tool
- 3 Dusting brush
- 4 Tool storage clip
- 5 Lid retaining clips
- 6 Combination floor tool
- 7 Rear wheels
- 8 Tool parking slot
- 9 Rear cord hook
- 10 Eco power switch
- 11 Kettle connection power cord
- 12 Post motor exhaust
- 13 On/off switch
- 14 360° rotating castor wheels
- 15 Flexible hose
- 16 Carry handle
- 17 HEPA cloth pre-motor filter
- 18 Foam pre-motor filter
- 19 Dust bag

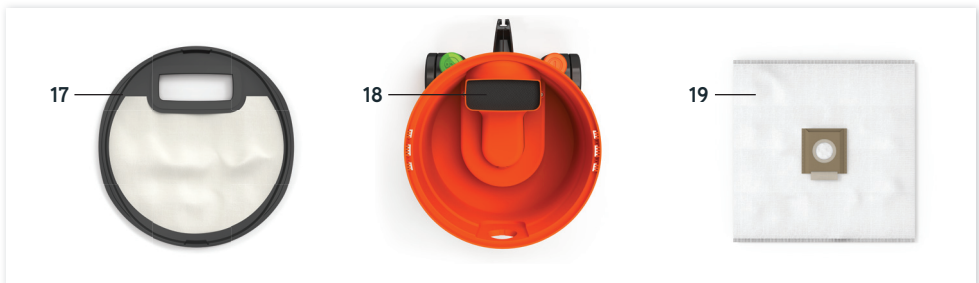


INFORMATION: The accessories are stored in the dust bag compartment and need to be removed before operating the vacuum cleaner.


WARNING: Always switch off and unplug your vacuum cleaner from the electrical socket before carrying, opening, emptying or conducting maintenance or troubleshooting checks on the machine. Always switch off and unplug your vacuum cleaner from the electrical socket when connecting/disconnecting the attachments.

PLEASE READ SAFETY INFORMATION BEFORE USE (PAGE 9)


Assembling your vacuum cleaner

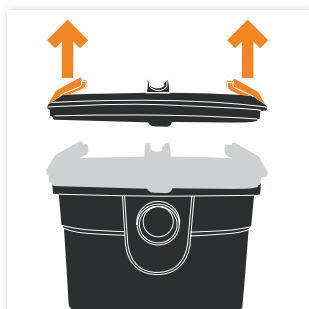


Unclip the locking clips and remove lid.

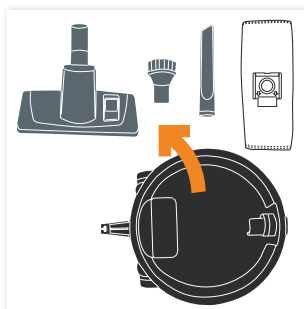


Remove accessories and dust bag.

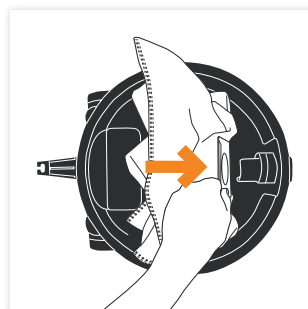


Slide dust bag opening over hose inlet and ensure it is secure.

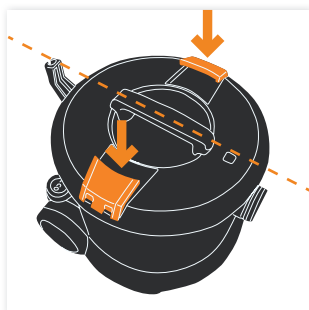

Replace lid by aligning handle with rear parking slot and hose outlet.

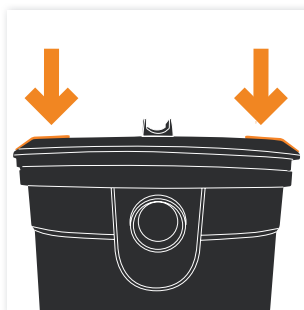


To lock lid in place, ensure clips are pressed down fully and flush with surface.

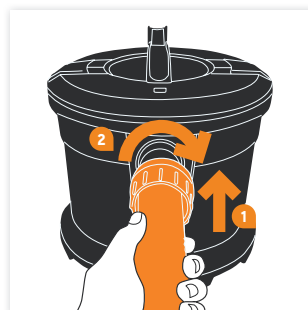


Align hose and turn clockwise until secure.


Operation

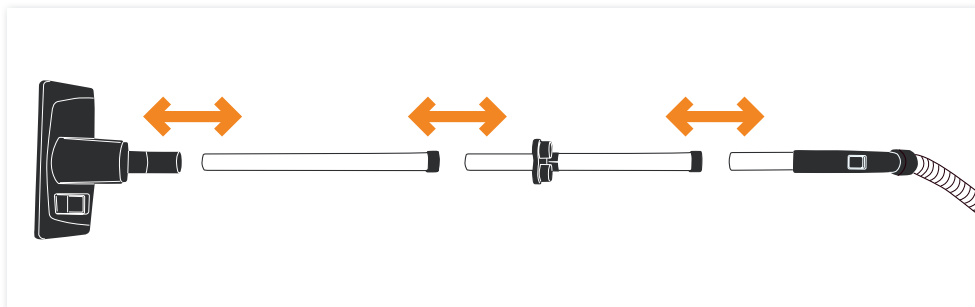


Push together the two metal extension tubes and attach the hose and floor head.

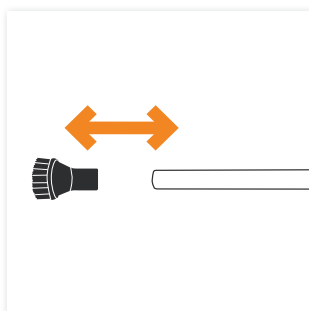


Connect the dusting brush to the handle or tube to clean delicate surfaces such as window sills and desks.

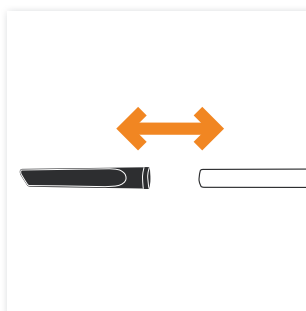

Connect the crevice tool to the handle or tube for cleaning edges and difficult to reach areas.

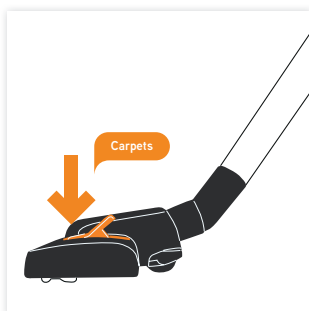



To clean carpets push the switch forwards.

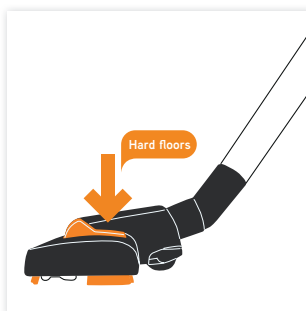


To clean hard floors push the switch backwards.

Operation


Attaching the cord

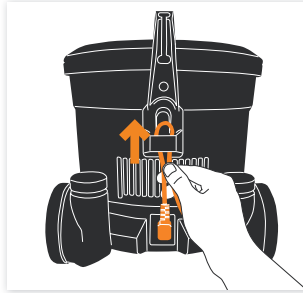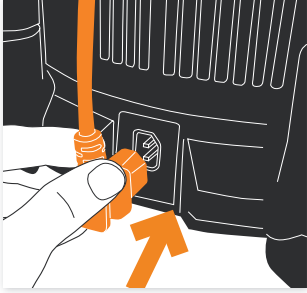


Form a loop in the cable and slide into retaining clip.

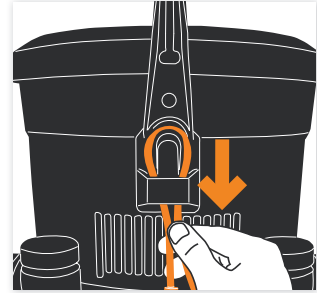


Pull down to secure.

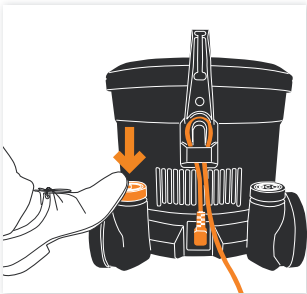



Press power button once to turn on machine. Machine will start in high power.

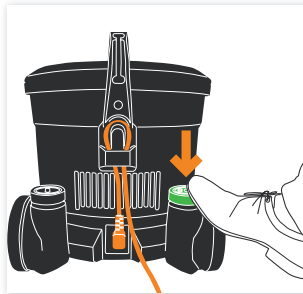

Press eco button to move between high/low power modes.

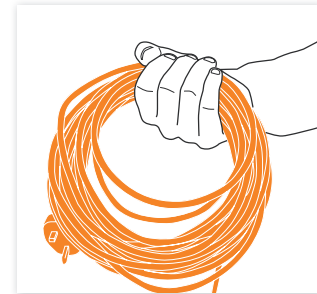

After use, loop power cord in hand and store on rear hook.

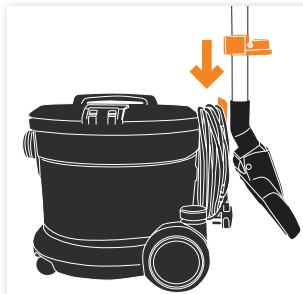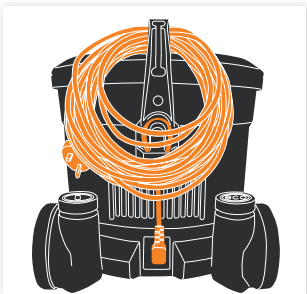

To store, hook the floor head into the parking slot.


NOTE: The machine will not function properly unless the cord is secured in the retaining clip.

CAUTION: Do not lift or pull the machine by the power cord.

Maintenance

! WARNING: Always switch off and unplug your vacuum cleaner from the electrical socket before carrying, opening, emptying or conducting maintenance or troubleshooting checks on the machine. Always switch off and unplug your vacuum cleaner from the electrical socket when connecting/ disconnecting the attachments.

Cleaning the HEPA cloth pre-motor filter: quick clean

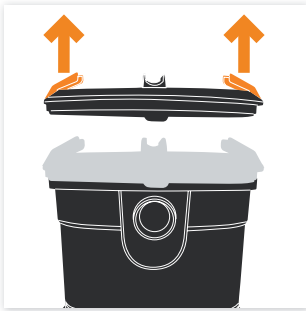


Raise the locking clips and lift lid.



For a quick clean simply use the dusting brush to remove debris from the HEPA pre-motor filter.

Cleaning the HEPA cloth pre-motor filter: deep clean

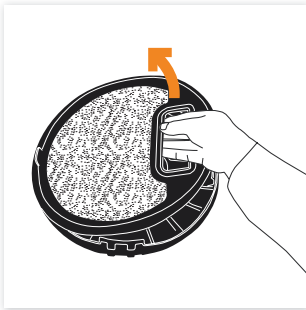

For a deeper clean remove the filter and use the dusting brush to clean both sides.




Align arrows to secure filter back into lid.

! CAUTION: Do not wash the filter as this will damage the medium.

Maintenance

Cleaning the foam pre-motor filter

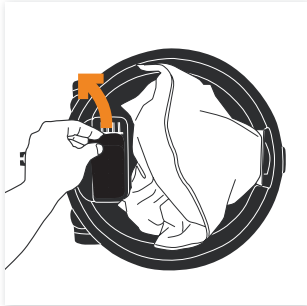

Remove the pre-motor filter.



Rinse under cold water.



Leave to fully dry in natural sunlight.



WARNING: Avoid direct heat sources as these will damage the filter.

Filter replacement

To maintain optimum performance check filters whenever you replace the dust bag. Replace the filters if they become damaged or discoloured.

Cleaning the combination floor tool

To maintain optimum performance, regularly inspect and clean the combination floor tool. To do this, place the floor tool in hard floor mode and remove any hair or fibres from the bristles.

Checking castors and wheels

To help maintain the smooth movement of the machine, regularly check the front castors and rear wheels and remove any hair or fibres.

FAQs



WARNING: To reduce the risk of personal injury, unplug the vacuum cleaner from mains supply before performing maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the 'Machine Overview' (page 2) to make sure the part is definitely included in your unit.
- If it is missing, we're here to help. Simply call us on **0844 375 4275**

Why will the vacuum cleaner not run?

- It may not be plugged into the electrical outlet correctly. Ensure that the plug is pushed into the electrical outlet securely.
- The electrical outlet may not be working. If unsure consult an electrician.
- The motor thermostat may have tripped. Switch off and unplug the vacuum cleaner. Leave for one hour before switching the vacuum cleaner back on.

Why won't the vacuum stay in "Eco" mode?

- When the machine is turned off and then back on it returns to full power mode. To re-enter "Eco" mode, press the green "Eco" button once.

Why won't the vacuum cleaner pick up?

- Dust bag may be full or incorrectly installed; remove the dust bag from the unit and if not full, re-attach as shown on page 3.
- The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 6 and 7.
- The filter may not be fitted correctly; refer to 'Maintenance: Cleaning the filters' on page 6
- There may be a blockage in the tube or hose. Disconnect the hose from the vacuum cleaner, carefully remove any blockages found and reconnect securely.

Why won't the accessories pick up properly?

- Accessories may not be attached securely; ensure tools are fitted correctly as shown on page 4
- Accessory may be blocked; remove accessory from handle/tube and carefully remove blockage and re-attach to the vacuum cleaner.

Why is dust escaping from the vacuum?

- The filter may be clogged; refer to 'Maintenance: Cleaning the filters' on page 6 and 7.
- The dust bag may be full; remove the bag and if full, fit a new bag as shown on page 3.
- Dust bag may be incorrectly installed; remove the dust bag from the unit and re-attach as shown on page 3.
- The hose may not be installed correctly, remove and refit as shown on page 3

What do I do if the unit/an accessory becomes damaged or broken?

- We're here to help. Simply call **0844 375 4275** or visit vaxcommercial.co.uk

General Safety Information

When using the vacuum cleaner, basic safety precautions should always be observed, including the following:

1. Ensure that the unit is disconnected from the mains supply prior to assembling/disassembling any part of the machine.
2. **Do not pull, lift or carry by the cord. Do not close a door on the cord or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.**
3. This appliance should be used and/or stored in dry environments only.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Use only as described in this manual. Use only the manufacturer's recommended attachments.
6. Regularly examine the cord for damage, such as cracking or ageing. If damage is found replace the cord with a genuine Vax part before further use. See p10 for details.
7. Do not use the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water. Return the vacuum cleaner to a Vax Authorised Service Agent for examination, repair or adjustment. Call 0844 375 4275 for your nearest service centre.
8. Do not handle the plug or vacuum cleaner with wet hands.
9. Ensure airways remain clear of blockages during use for best performance.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up hot, smoking, burning, flammable, hazardous or combustible materials or use in the presence of explosive liquids or vapours.
12. Do not vacuum up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
13. Do not vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
14. Do not use without the filters in place.



CAUTION: Before plugging the cord in make sure the machine is switched 'off' position. Hold the vacuum cleaner firmly when plugging in and turning on.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Motor Thermostat



IMPORTANT: The motor is equipped with a thermal cut-out. If for any reason, the vacuum cleaner should over-heat; the thermostat will automatically turn the unit off. Should this occur, unplug the vacuum cleaner, clean the filters and allow the cleaner to cool for approximately one hour. To re-start, plug in the machine and switch on.

Machine Overview

Service & Help

Vax Commercial Careline:
(UK) 0844 375 4275

Monday-Friday 8.30am to 6.30pm
Saturday-Sunday 9.00am to 5.00pm

Any queries or concerns about using your Vax, call the Vax Commercial Careline. Calls are charged at the UK local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling. For the nearest Service Agent, please call the Vax Commercial Careline or visit vaxcommercial.co.uk

Consumables

To purchase spares and accessories, please visit vaxcommercial.co.uk

Crevice tool	1-1-131557-00
Dusting brush	1-1-131558-00
2.5m hose	1-1-131559-00
12.5m cable with kettle connection	1-1-131560-00
2 x metal extension tubes	1-1-131561-00
Multifunction floor head	1-1-131562-00
Large pre-motor HEPA filter	1-1-131563-00
Foam pre-motor filter	1-1-131564-00
10 x paper dust bags	1-1-131644-00
10 x cloth dust bags	1-1-131645-00

Technical Specification

Voltage:	220-240V ~50Hz
Wattage:	1400W
Capacity:	9L
Filters:	HEPA cloth pre-motor filter Foam pre-motor filter Foam post-motor filter
Cord length:	12.5m
Weight:	4.5kg (machine only)

Subject to technical change without notice.

Other Information



EEC Statement of Compliance

Manufacturer/EEC importer: Vax Limited, hereby on our own responsibility, declare that the VCC-08 series is manufactured in compliance with the following Directives:

Safety: 2006/95/EC Low Voltage Directive

EMC: 2004/108/EC Electromagnetic Compatibility Directive Disposal

Disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.





Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vaxcommercial.co.uk website: vaxcommercial.co.uk

Version 1.0

Performance is everything.™