

Orbis eco User Guide



THIS USER GUIDE SHOULD ALWAYS BE USED IN CONJUNCTION WITH THE USER MANUAL

1. Preparing the machine



Adjust the handle to an upright position by turning the handle lever on the side of the machine and securing in position.



Pull the handle down until it rests on the floor and the brush guard is raised.



Fit the brush or drive board and pad onto the drive plate and rotate it anti-clockwise until secure.



Return the machine to the upright position.


2. Using the machine



Fully unwind the supply cord from the handle and plug into a convenient socket outlet.



Adjust the handle to a comfortable working position using the handle lever.

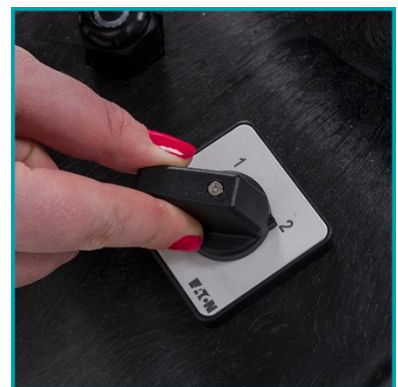

If you have a duo machine, select the speed you wish to operate at. Always ensure the machine is switched off before changing the speed setting.



Push the power button and then press and hold the switch triggers to start the machine. The switch triggers must be held whilst using the machine.



The normal movement of the machine is from side to side across the floor. Whilst it is engaged in the normal working position, lower the handle to move the machine to the left. Raise the handle to move the machine to the right.



To stop the machine release both switch triggers.

Do not leave the machine standing still or on a brush or drive board and pad when not in use.

4. Scrubbing and shampooing



Fill the solution tank with mixed water and approved chemical according to the chemical manufacturer's instructions.



The flow of solution from the tank is controlled by moving the left hand lever. Releasing the lever stops the solution. Proceed to operate the machine in the normal manner, releasing solution as required.



Use a wet & dry vac to pick up the solution after.

5. After use and storage



For storage switch off the machine and unplug.



Remove the brush or drive board & pad. Never store the machine with a brush or drive board and pad fitted as this can cause distortion, and results in instability during operation.



Wrap the cable around the cable lever ensuring that plug is not trailing on the floor. Store the machine in a dry indoor area only.